


# — ENVOY 2 ENCORE QUICK START —

Hold **▶** to turn **ON**. LED will turn on, the player will “beep” *once* and play automatically. Hold **▶** again to turn **OFF**. LED will turn off, the player will “beep” *twice* and stop playing.

Problems with the player? Try pressing the Reset button.

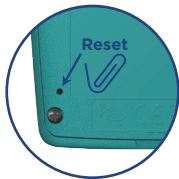

*\*Envoy 2 Encore pictured*

POWER/PLAY/  
PAUSE



SECTIONS/  
CHANNEL 1



SECTIONS/  
CHANNEL 2



VOLUME



SECTIONS (Click)/  
CHANNEL (Press)



BOOKS



CHAPTERS



Full user manual: <https://kvisit.com/VQ/ueC0AQ/CQ>

