



BOTTOM

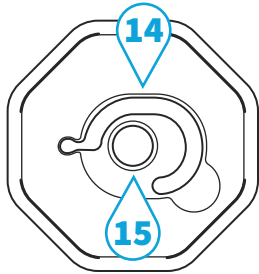

14 Hanging Hook


15 Flashlight

CHARGING + RESET

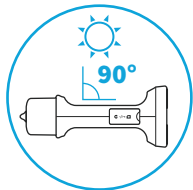


Solar Charging

Face bright
sunlight for best
results

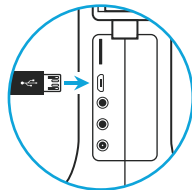

Computer/Wall Charging

Plug cable into the
Micro USB port

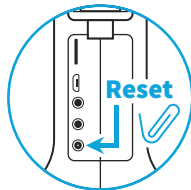


Reset

Press Reset switch
centered in the bottom/
corner Antenna Jack















LifeLight // Quick Start Guide

PLAYER/RADIO - TURN ON/OFF

Press and hold  until the LifeLight turns On (a chime will play and the LCD screen will turn On).

Press and hold  again until the LifeLight turns Off (a chime will play and the LCD screen will turn Off).


PLAYER/RADIO BUTTONS

-  **Power** - Press and hold to turn the LifeLight On/Off
-  **Radio** - Press and hold to enter Radio mode
-  **Speed Control** - Click to enter Speed Control mode
-  **Channel Select** - Click to navigate to the next Section, press and hold to navigate to the next Channel
-  **Volume Down** - Click/press and hold to lower the volume level
-  **Volume Up** - Click/press and hold to raise the volume level
-  **Menu** - Click to enter the Main Menu and adjust settings (like clock)
-  **Play/Pause** - Click to Play/Pause playback
-  **Previous Book** - Click/press and hold to skip to previous Book(s)
-  **Next Book** - Click/press and hold to skip to next Book(s)
-  **Previous Chapter** - Click/press and hold to skip to previous Chapter(s)
-  **Next Chapter** - Click/press and hold to skip to next Chapter(s)
-  **Fast Rewind** - Click/press and hold to fast rewind
-  **Fast Forward** - Click/press and hold to fast forward

To see the full user manual, please visit:
<https://kvisit.com/VQ/ueC0AQ/Bg>




FRONT + BACK

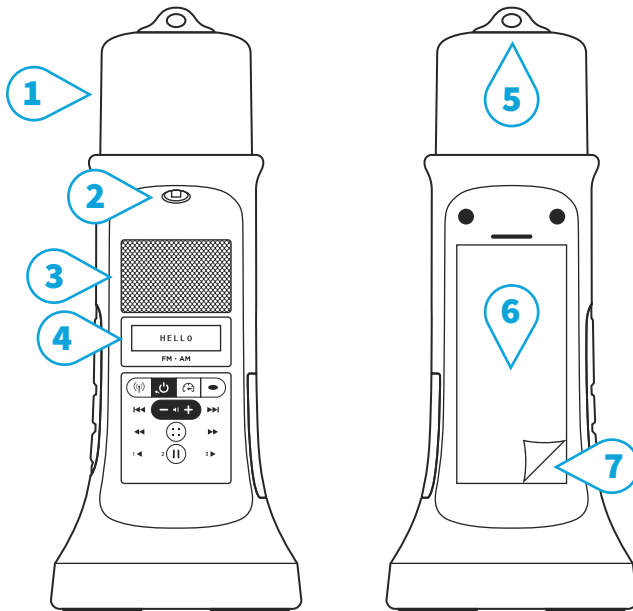

- 1** Lantern
- 2** Night/Reading Light
- 3** Speaker
- 4** LCD Screen
- 5** Lanyard Hole
- 6** Solar Panel
- 7** Protective Film (removable)

LEFT + RIGHT

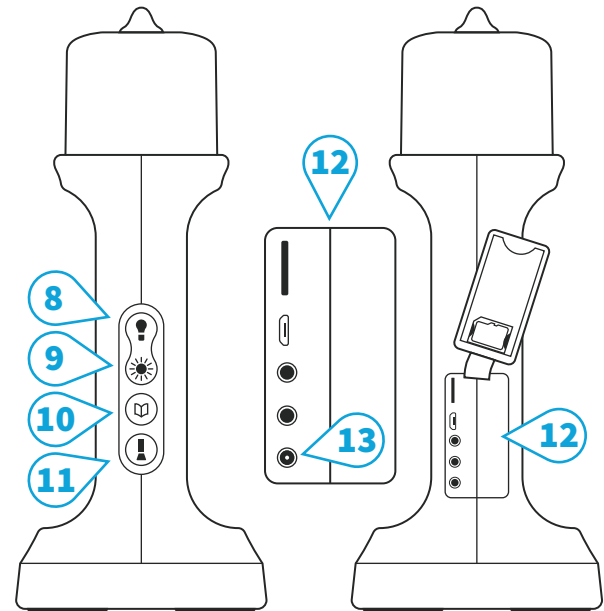

- 8** Lantern Select/SOS Mode¹
- 9** Lantern Intensity
- 10** Night/Reading Light Intensity
- 11** Flashlight Intensity
- 12** MicroSD Slot²
- Micro USB Port
- Stereo Earphones
- AM Antenna Jack³
- FM Antenna Jack³
- 13** Reset Switch

To see the full user manual, please visit:
<https://kvisit.com/VQ/ueC0AQ/Bg>



¹2-Seconds Press to de/activate

²MicroSD card not included

³Accessory not included