


POCKETVOICE QUICK START

Hold **▶** to turn **ON**. A chime will sound and PocketVoice will play automatically. Hold **▶** again to turn **OFF**. A chime will sound and PocketVoice will stop playing. While in Pause mode, press **<** and **>** for 2 seconds to reset playback to the first chapter.

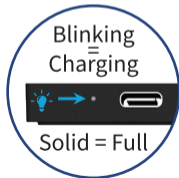



POWER/PLAY/
PAUSE



CHAPTER BACK/
REWIND



CHAPTER FORWARD/
FAST FORWARD

PRESS



HOLD



⏮ RW

PRESS



HOLD



FF ⏭



Online version available here:

<https://kvisit.com/VQ/ueC0AQ/Cw>