

Solar-Powered Audio Player

User Manual

ENVOY S DUAL



EASY START



Press and hold the power button until the light turns on



The player will start to play automatically



CHARGING INSTRUCTIONS

With proper care, the Audio Player's Lithium-Ion battery should perform well for several years. Please fully charge the player before the first use following one of the charging methods below:



For fastest charge, plug the player into an electrical outlet using the charger provided or any standard "USB" charger (regulated +5VDC, minimum 300mA) with mini-USB plug for 1 hour.



Plug player into any standard computer USB port using a "USB to mini-USB" cable for 3 hours.



For solar charging, place the player with the solar panel facing bright sunlight for 6 hours.



For charging by a light bulb, place the player solar panel facing up 10cm (4 inches) away from a 60-watt bulb for 6 to 8 hours.

Before storing the player for prolonged periods, make sure the battery is at least partially charged. If stored for extended periods, you should fully recharge the player every 6 months; otherwise the battery may lose its ability to recharge.

Should the battery become damaged and unable to accept a charge, you can still operate the player using the power cord.

OPERATING THE ENVOY S DUAL

TURNING THE PLAYER ON/OFF

ON / OFF Hold the on/off button for three seconds to turn the player on and begin play mode. Press the on/off button briefly to turn the player off.



SELECTING A MESSAGE GROUP

BLUE **BROWN**

To choose a message section, press one of the two buttons.

CHOOSING A SECTION WITHIN THE CHOSEN GROUP

After choosing a message group, press the current group button to change sections.

USING A SECTION WITHIN THE CHOSEN MESSAGE GROUP

Press **◀** or **▶** to go to another message. A long press will skip 3 messages at a time until the button is released.

Press **◀** or **▶** to jump forward or back one chapter. A long press will skip 5 chapters at a time until the button is released.

Press **◀** or **▶** to jump forward or back 10 seconds. A long press will keep navigating forward or backward in 10 second increments until the button is released.

THE PAUSE/BOOKMARK BUTTON

Press **⏸** to pause or stop. To resume playback, press the pause button or the **⏪** or **⏩** button. If the player is paused and then switched off, the player will place a bookmark at that position.

CHANGING A BOOKMARK

The bookmark position can be changed by pausing the player and turning it off at the new desired bookmark location.

CONNECTING EARPHONES OR SPEAKERS

Insert earphone or speaker plug into the standard 3.5mm phone jack on the side of the unit.

Press **-** or **+** to lower or raise the volume. The volume will remain set at this level even after the player is turned off and restarted.

PROBLEMS WITH THE PLAYER?

If the unit will not play, first make sure the batteries are charged according to the charging instructions. If the player is charged and still will not play, it may require rebooting. To do this, press the **⏻** button for 10 seconds until the player turns off. It will turn on automatically after a reboot.

WARNINGS:

- DO NOT expose player or battery to fire or extreme heat.
- Stop using player if you observe abnormal heat, odor, discoloration, leakage or deformation, especially near battery. Refer to a qualified technician for service.
- If battery is removed from the player, handle it with care. Keep the exposed battery out of reach of children. DO NOT burn, puncture, disassemble, or modify battery.
- If battery leaks, dispose of it carefully in accordance with all local laws. Wash any skin or clothing exposed to battery liquid and avoid swallowing or contact with eyes. In the case of swallowing or contact with eyes, seek medical care immediately.