









THE ENVOY ST USER MANUAL


PLAYER CONTROL AND NAVIGATION






Press the  (power) button for 2 seconds to turn the player *on* (player beeps once). While the player is on, a brief press on  will turn the player *off* (player beeps twice).


 
Press the  or  buttons to reverse/advance 1 Book. A long press skips 3 Books at a time.



Press the  or  buttons to reverse/advance 1 Chapter. A long press skips 5 Chapters at a time.

Press the  or  buttons to reverse/advance *approximately* 10 seconds in the current Chapter.

To pause playback *or* set the bookmark to the current position, press the  (pause) button. The player will beep and the LED will blink intermittently. You may either resume playback or turn the player off. When the player is turned back on, playback will begin from the bookmarked position.

To resume playback, press  or one of these navigation buttons:    .

To reset the bookmark to the *beginning* of the message, briefly press the  button to pause the player. While paused, press and hold the  (volume up) button until the player beeps once. You may either resume playback or turn the player off.

Press  or  to decrease or increase the volume. The volume setting is remembered even after the player is restarted.



BATTERY CARE AND CHARGING

With proper care, the player's Lithium-Ion battery should perform well for several years. When shipped, the battery is only partially charged. You can easily charge the player using one of the methods below:



For fastest charge, connect any standard "USB" charger (regulated +5VDC, minimum 300mA) to the mini-USB port on the player for about 2 hours (or until the LED stops blinking). While charging, the LED will blink.



Plug the player into any standard computer USB port using a "USB to mini-USB" cable for about 3 hours or until the LED stops blinking. Any MegaVoice SLS, regular or charge-only cable is sufficient.









For solar charging, place the player with the solar panel facing bright sunlight for at least 8 hours.

Before storing the player for prolonged periods, make sure the battery is at least partially charged. If stored for extended periods, it is recommended to recharge the player *at least* every 6 months in order to prevent the battery from losing its ability to charge. For optimum battery life, try to store the player at room temperature or cooler.

Should the battery become damaged and unable to accept a charge, you can still operate the player using the power cord (charger).

WARNINGS AND ADVISORIES

-  **RESET:** If the player becomes unresponsive or behaves abnormally, reset it by holding the power button for about 10 seconds.
-  Set the volume at the lowest level that can be heard comfortably. Prolonged exposure to loud sound can cause gradual hearing loss.
-  DO NOT expose the player or battery to fire or extreme heat.
-  Stop use if you observe abnormal heat, odor, discoloration, leakage or deformation, especially near battery. Refer to a qualified technician for service.
-  If the battery is removed from the player, handle it with care. Keep the exposed battery out of reach of children. DO NOT burn, puncture, disassemble, or modify the battery.
-  If the battery leaks, dispose of it carefully in accordance with all local laws. Wash any skin or clothing exposed to battery liquid and avoid swallowing or contact with eyes. In the case of swallowing or contact with eyes, seek medical care immediately!