



QUICK START GUIDE

BOTTOM

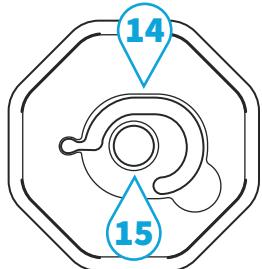


14 Hanging Hook
15 Flashlight

CHARGING + RESET

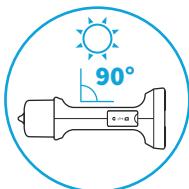

Solar Charging
Face bright
sunlight for best
results

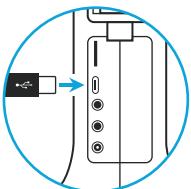

**Computer/Wall
Charging**
Plug cable into the
USB-C port



Reset
Press Reset switch
centered in the bottom
Antenna Jack

To see the full user manual, please visit:
<https://kvisit.com/VQ/ueC0AQ/Bg>



PLAYER/RADIO - TURN ON/OFF

Press and hold until the device turns On (a chime will play and the LCD screen will turn On).

Press and hold again until the device turns Off (a chime will play and the LCD screen will turn Off).


PLAYER/RADIO BUTTONS

- Power¹** - Press and hold to turn the device On/Off
- Radio** - Press and hold to enter Radio mode
- Speed Control** - Click to enter Speed Control mode
- Channel Select** - Click to navigate to the next Section, press and hold to navigate to the next Channel
- Volume Down** - Click/press and hold to lower the volume level
- Volume Up** - Click/press and hold to raise the volume level
- Menu¹** - Click to enter Main Menu and adjust settings (like clock)
- Play/Pause** - Click to Play/Pause playback
- Previous Book** - Click/press and hold to skip to previous Book(s)
- Next Book** - Click/press and hold to skip to next Book(s)
- Previous Chapter¹** - Click/press and hold to skip to previous Chapter(s)
- Next Chapter¹** - Click/press and hold to skip to next Chapter(s)
- Fast Rewind** - Click/press and hold to fast rewind
- Fast Forward** - Click/press and hold to fast forward

¹Buttons with red highlights also function in Menu Mode

QUICK START GUIDE

FRONT + BACK

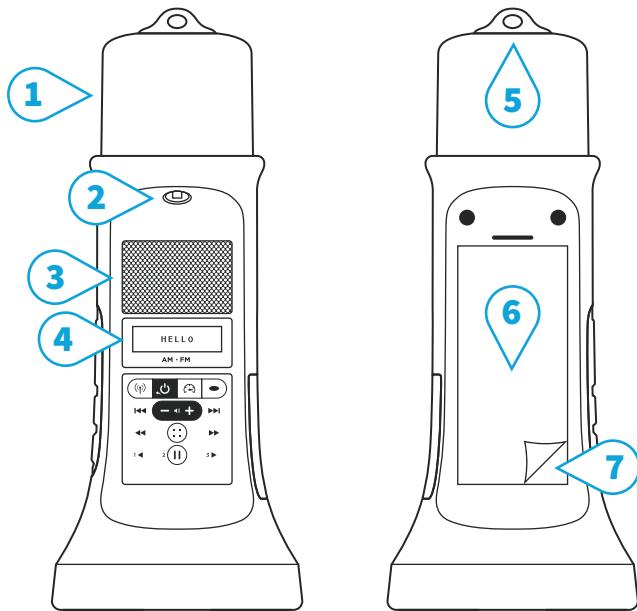


- 1 Lantern
- 2 Night/Reading Light
- 3 Speaker
- 4 LCD Screen
- 5 Lanyard Hole
- 6 Solar Panel
- 7 Protective Film (removable)

To see the full user manual, please visit:

<https://kvvisit.com/VQ/ueC0AQ/Bg>



LEFT + RIGHT

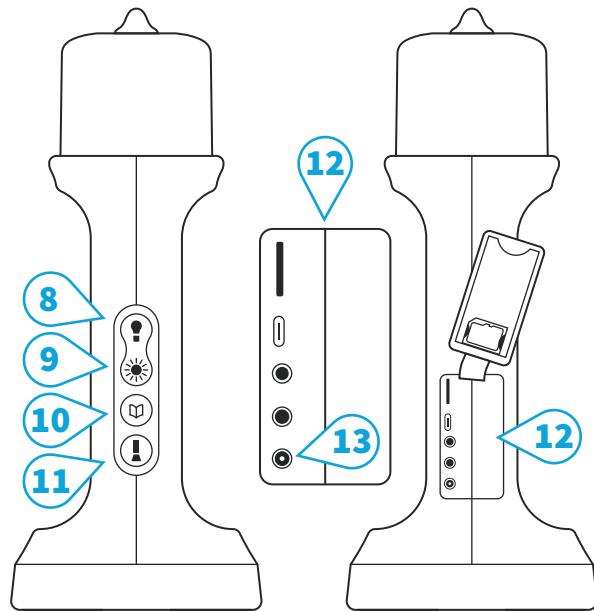

- 8 Lantern Select/SOS Mode¹
- 9 Lantern Intensity
- 10 Night/Reading Light Intensity
- 11 Flashlight Intensity
- 12 MicroSD Slot² / USB-C Port
- 13 Reset Switch

¹2-Seconds Press to de/activate

²MicroSD card not included

³Accessory not included