
## Solar Speaker // Quick Start Guide

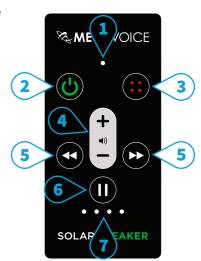

Press of for 2 seconds to turn the Solar Speaker On/Off (a chime will play).

- 1 Main LED Indicates status: On/Off and Mode (Blue: BT Connectivity // Red: Auxilliary).
- 2 Power Hold for 2 seconds to turn On/Off. Click to check the battery level and/or to initiate the external device charging.
- 3 Mode Click to switch between BT and Auxilliary mode.
  In BT mode press and hold to disconnect from a paired BT device.
- 4 Volume Down/Up Click or hold to lower/raise the volume level.
- 5 Chapter Rewind/Forward Click to navigate to the previous/ next file (BT mode only!).
- 6 Play/Pause Click to play/pause the playback (BT mode only!).
- 7 LED Indicators Indicate the battery level. Charge Out (Solid) // Charge In (Blink).





## Solar Speaker // Quick Start Guide MEGAVOICE



- 8 Auxiliary Cable Jack 3.5mm Stereo/Mono capable connection for external devices (Auxiliary mode only!).
- **Restart Button** Insert a paper clip and click to restart the Solar Speaker.
- 10 USB-A (Charge Out) Insert a USB-A cable to charge an external device - click on **(b)** if charging does not initiate automatically.
- 11 USB-C (Charge In) Insert a USB-C cable from an external charger (5VDC, 2A) to charge the Solar Speaker.



Charge-Out - from Solar Speaker's USB-A port to an external device.



Charge-In - from a wall charger/computer to Solar Speaker's USB-C port.



**Solar Charging** - Make sure the Solar Speaker's solar panel has a clear view of the sun.

