

Solar-Powered  
**Story Teller**  
Audio Player

User Manual



## STORY TELLER PLAYER INSTRUCTIONS

### CONTROL

**To turn player ON or OFF:** Move the power switch to the ON or OFF position. The player will begin to automatically play audio when the power switch is turned ON.

**To ADVANCE** to the next story/message, briefly press the ► (forward) button.

**To REVERSE** to the beginning of the current story briefly press the ◀ (reverse) button. To REVERSE to the previous story, double-click the ◀ button.

This easy-to-use solar-powered audio player is designed to play stories and messages in sequence, pausing after each one.

- The player will stop playing at the end of each story. Press ► button briefly to advance to the next story.
- If the button is not pressed for 2 minutes following the end of a story, the player will automatically enter SLEEP MODE.
- To bookmark the current story, press and hold for 2 seconds the ► button. The player has now entered SLEEP MODE. Player can be turned OFF with bookmark saved. Turn player ON to play current story.
- To resume playing the story when in SLEEP MODE, momentarily press the ► button until the light illuminates (about 1 full second).
- After the last story is played, the player will automatically return to the first story.

### VOLUME CONTROL

There are 5 preset volume levels. To increase volume to next preset volume level, press the ► (volume) button. To return to the lowest preset volume level, repeatedly press the ◀ button.

### CHARGING INSTRUCTIONS

**Charge Battery** to full level using one of the following methods:

- placing solar panel in direct sunlight for 6-8 hours
- connecting player to wall charger (standard USB 5VDC, 500mA) via the mini-USB port for 3 hours
- connecting player to a computer via the mini-USB port for 3 hours

**Low-battery Shut Off:** The player will beep and automatically enter SLEEP MODE when the battery power level becomes too low for reliable operation. Recharge battery for continued use.

**Charging Indicator:** Player will charge with power switch in either ON or OFF position. However, while charging via the mini-USB port, the light will flash slowly as battery is charged only when power switch is ON position.

**Reset** the player by turning the power switch OFF in the event player becomes unresponsive or behaves abnormally. Wait about ten seconds and then turn the player ON.

### WARNINGS:

- Dispose of player properly following all applicable local laws.
- DO NOT throw into fire or dispose of player by burning it.