

Envision B02 // Quick Start Guide



Secure, Accessible, Touch Screen Audio/Video Device

Perfect for visual learners and those who are deaf or hearing-impaired.

- 1** Power Button
*Press and hold for 2 seconds to turn ON.
Press and hold again for 2 seconds to turn OFF.*
- 2** 3.5mm Stereo Audio Jack
- 3** Audio/Visual Connector
- 4** MicroSD Card Reader
- 5** Type-A USB OTG Connector
- 6** Type-C USB Charge and Data Connector
- 7** Red/Green Charge LED
- 8** Hardware Reset Switch



For more information and a full user manual, please visit megavoice.com



Envision B02 // Quick Start Guide



- 1 Volume/Brightness Sliders
- 2 Charge Indication (fully charged)
- 3 Battery Capacity (full)
- 4 Volume Adjustment (active)
- 5 Brightness Adjustment
- 6 Internal Storage (selected)
- 7 MicroSD (connected)
- 8 OTG (connected)
- 9 A/V Device (connected)
- 10 Go to Image Screen
- 11 Go to Audio Screen
- 12 Go to Video Screen
- 13 Go to Storage Selection Screen
- 14 Go to Info Screen

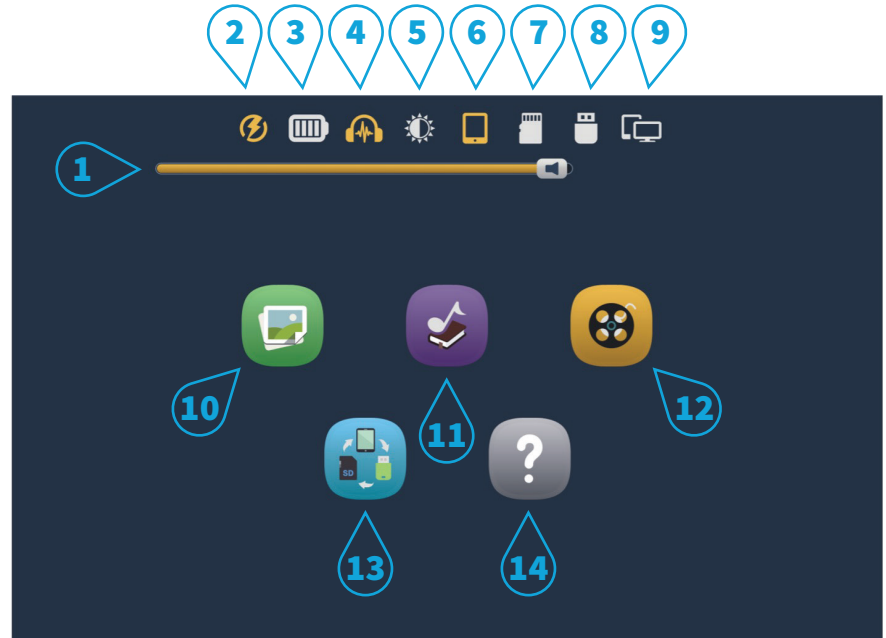


Image Above: Envision B02 is connected for charging (completed) (2), battery is full (3), an external audio device is connected (4), A/V device is connected (but not active) (9), the volume is being adjusted (1+4), and external microSD and OTG are connected (7+8) but Internal Storage is the selected input (6).